

# HOW TO DELETE THE SYSTEM PASSWORD

*on*

## TOSHIBA NOTEBOOK, DESKTOP, AND SERVER SYSTEMS

	(1)	(2)	(3)	(4)	(5)
<b>Libretto 50, 70, 100, 110 Series</b>	✓				
<b>Portégé 610, 620, 650, 660, 3010, 3020, 3110, 3140 Series</b>	✓				
<b>Portégé 3440, 3480, 3490, 4000, 7000, 7010, 7020, 7140, 7200 Series</b>	✓				
<b>Portégé 7200CTe, 7220CTe Series</b>	✓				
<b>Satellite 100, 110, 200, 220, 300, 310, 320, 330, 1550, 1800 Series</b>	✓				
<b>Satellite 1605, 1625, 1675, 1695, 1715, 1730, 1750, 3000 Series</b>					✓
<b>Satellite 2060, 2100, 2140, 2180, 2210, 2230, 2250, 2500, 2510 Series</b>	✓				
<b>Satellite 2520, 2530, 2540, 2550, 2590, 2610, 2650, 2670, 2710 Series</b>	✓				
<b>Satellite 2750, 2770, 2800, 4000, 4010, 4020, 4030, 4060, 4070 Series</b>	✓				
<b>Satellite 4080, 4090, 4100, 5000 Series</b>	✓				
<b>Satellite Pro 400, 410, 420, 430, 440, 460, 470, 480, 490 Series</b>	✓				
<b>Satellite Pro 4220, 4260, 4270, 4280, 4290, 4310, 4320, 4330 Series</b>	✓				
<b>Satellite Pro 4340, 4360, 4380, 4600, 6000 Series</b>	✓				
<b>Tecra 500, 510, 520, 530, 540, 550, 700, 710, 720 Series</b>	✓				
<b>Tecra 730, 730X, 740, 750, 780, 8000, 8100, 8200, 9000 Series</b>	✓				
<b>T100, T200 Series</b>	✓				
<b>T1800, T1850, T1900, T1910, T1950, T1960 Series</b>	✓	✓			
<b>T2100, T2130, T2150, T2400, T2450 Series</b>	✓				
<b>T3300 Series</b>	✓				
<b>T3400, T3600 Series</b>	✓				
<b>T4400 Series</b>	✓				
<b>T6400 Series</b>	✓				
<b>T4500, T4600, T4700, T4800, T4850, T4900 Series</b>			✓		
<b>T6600 Series</b>			✓		
<b>Equium Series</b>				✓	
<b>Infinia Series</b>				✓	
<b>Magnia, M500, M500D, M510D Server Series</b>				✓	
<b>Toshiba V3100, 3200, V3300 Value-Priced Desktop Series</b>				✓	

### NOTES:

(1) Use the parallel port wraparound connector (P/N: TTW-9100)\* on the printer port. **Libretto series, Portege 3xx, 3xxx, 4xxx, 7xxx series, and Satellite 5xxx series do NOT have an integrated parallel port. An I/O bar (ships with system, except for Portege 4xxx) or an enhanced port replicator (sold separately) is required to provide the parallel port on the Libretto and Portege series. Printer PC Card (P000293630) and PC Card Cable (P000293640) are required to provide the parallel port on the Satellite 5xxx series.**

(2) Disconnect all power sources (i.e. AC adapter or AC power cord and all batteries: Main, RTC, Backup)

(3) Password deletion software is required. Ship computer to Toshiba Manufacturing Repair Center (MRC) or Premier ASP

(4) Reset via jumper setting on motherboard. See maintenance manual for location and setting.

(5) Reset via shorting jumper pad (**J1 - Satellite 16xx and 3xxx series/J9 - Satellite 17xx series**) on the system board for five seconds minimum with system powered off and main battery/AC adapter disconnected. Jumper pad is located under the memory cover. The expansion memory must be removed for access to the jumper pad. This procedure will also reset CMOS.

(\*) This part number includes both parallel and serial port connectors. If the unit is not listed above, then the system password security feature is not available.